



BLDC MOTOR KIT

PRODUCTS INTRODUCTION:

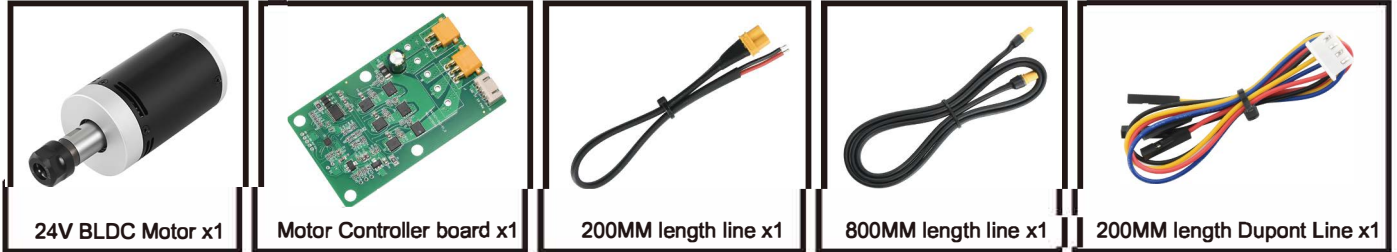

HOW TO USE:

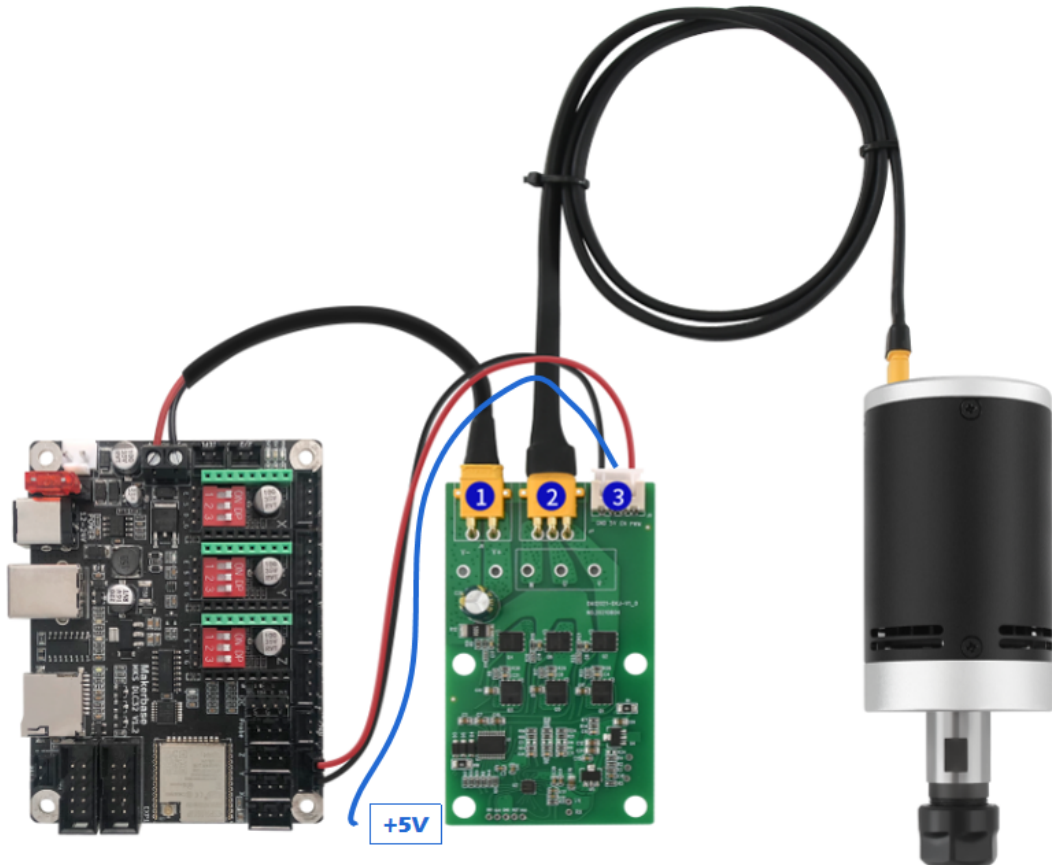

- ① Connect the power output port of the main control board to the power input port of the motor control board, V+ to V+, V- to V-.
- ② Connect the motor to the three-phase wire port of the motor control board.
- ③ Connect the PWM output port of the main control board to the PWM input port of the motor control board. The GND port of the main control board is connected to the GND of the motor control board. 5V connect to 5V.

CONTACT US:

www.sainsmart.com
support@sainsmart.com

Vastmind LLC, 5892 Losee Rd Ste. 132, N. Las Vegas, NV 89081

