


尺寸：297×210mm (A4对折)


Genmitsu PROVerXL 6060 Extension Hybrid Spoilboard Installation Guide

Package List


7 x Aluminum & MDF Hybrid Slat	28 x M5*16 Hex Screw
28 x M5*20 T-Nut	1 x 4mm Wrench
28 x M5*8 Hex Screw	1 x Manual

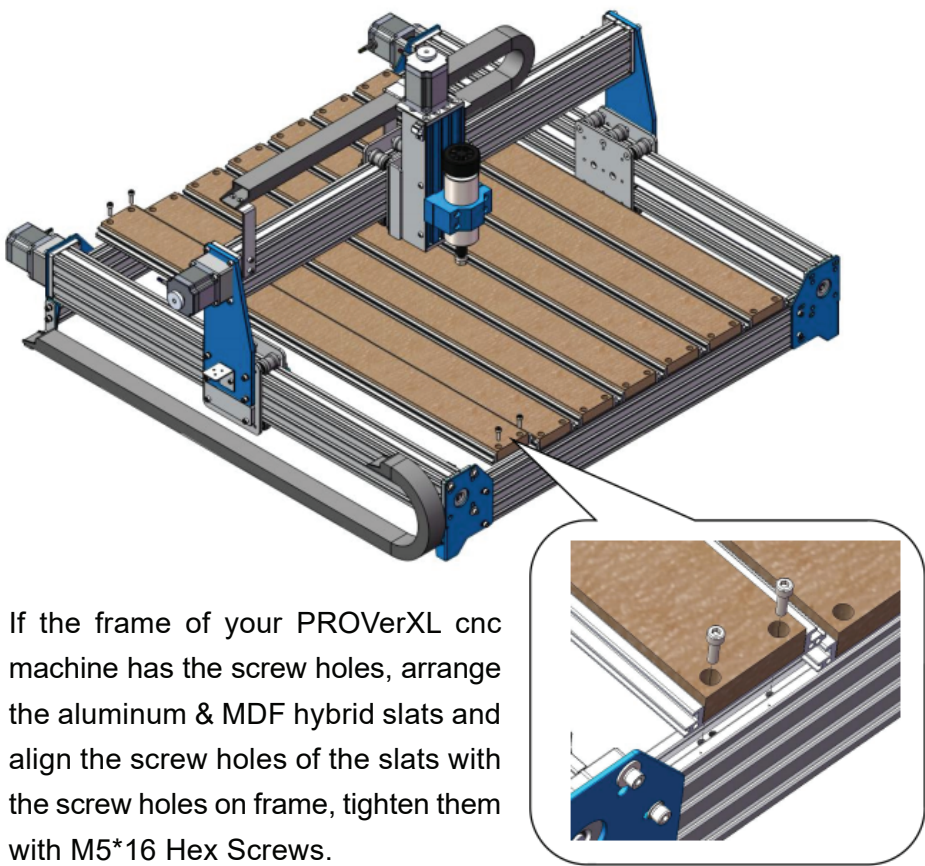

If the frame of your PROVerXL cnc machine has the screw holes, arrange the aluminum & MDF hybrid slats and align the screw holes of the slats with the screw holes on frame, tighten them with M5*16 Hex Screws.

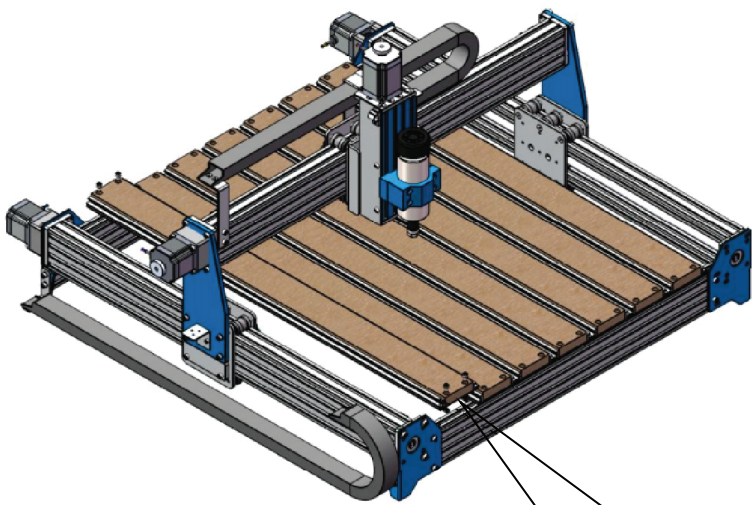

If the frame of your PROVerXL cnc machine doesn't have the screw holes, install the M5*8 Hex Screws

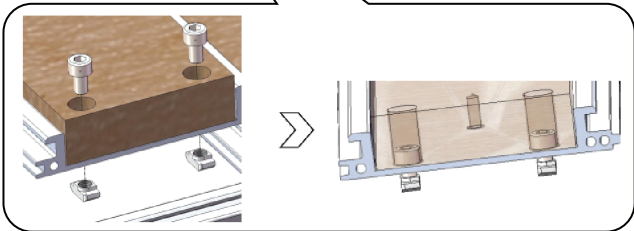

and M5*20 T-Nuts on each screw hole of the slats at first (don't lock them tightly, just need to screw 2-3 turns). Then, arrange the aluminum & MDF hybrid slats on the frame of your cnc machine and make sure that the T-Nuts are inserted in the frame, then lock them tightly.

If you need any assistance, please contact us via:

Email: support@sainsmart.com

Facebook messenger: https://m.me/SainSmart

Help and support is also available from our Facebook Group




内页


Genmitsu PROVerXL 6060 Arbeitsplattenerweiterung Montageanleitung

Lieferumfang


7 x Aluminium & MDF-Hybrid-Leiste	1 x Montageanleitung
28 x M5*20 mm T-Mutter	1 x 4mm Schraubenschlüssel
28 x M5*8 mm Innen-Sechskant-Schraube	
28 x M5*16 mm Innen-Sechskant-Schraube	

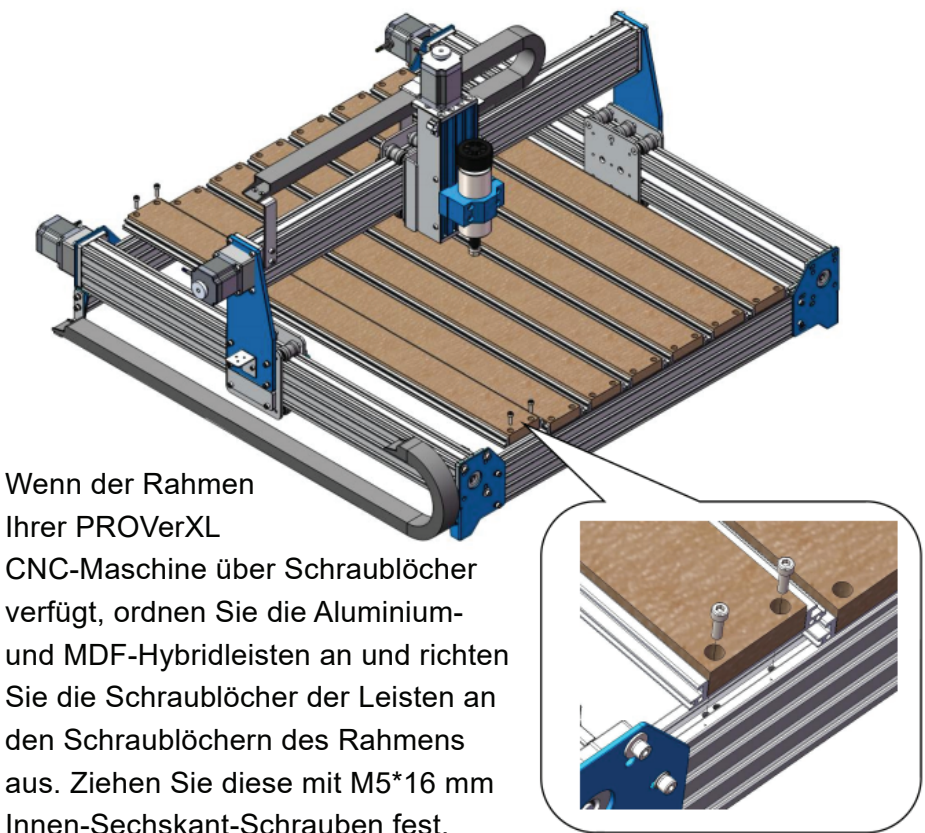

Wenn der Rahmen Ihrer PROVerXL CNC-Maschine über Schraublöcher verfügt, ordnen Sie die Aluminium- und MDF-Hybridleisten an und richten Sie die Schraublöcher der Leisten an den Schraublöchern des Rahmens aus. Ziehen Sie diese mit M5*16 mm Innen-Sechskant-Schrauben fest.

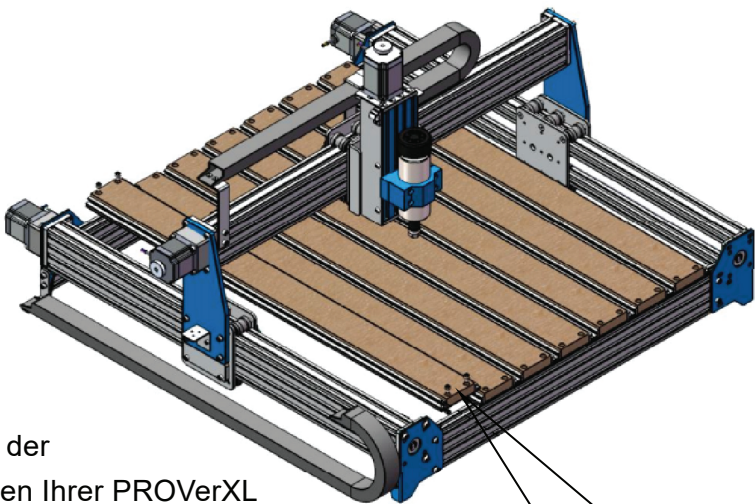

Wenn der Rahmen Ihrer PROVerXL CNC-Maschine keine Schraubenlöcher hat, installieren Sie die M5*8 mm Innen-Sechskant-Schrauben und M5 T-Muttern in jedes Schraubenloch der Leisten ein (ziehen Sie diese nicht fest an, sondern drehen Sie diese nur 2-3 Umdrehungen). Legen Sie dann die Aluminium- und MDF-Hybridleisten auf den Rahmen Ihrer CNC-Maschine und vergewissern Sie sich, dass die T-Muttern in den Rahmen eingesetzt sind, und ziehen Sie diese fest an.

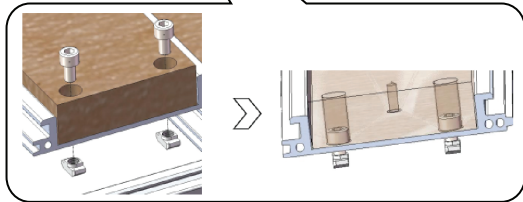

Legen Sie dann die Aluminium- und MDF-Hybridleisten auf den Rahmen Ihrer CNC-Maschine und vergewissern Sie sich, dass die T-Muttern in den Rahmen eingesetzt sind, und ziehen Sie diese fest an.

Wenn Sie Hilfe benötigen, kontaktieren Sie uns bitte über:

Email: support@sainsmart.com

Facebook Messenger: https://m.me/SainSmart

Hilfe und Unterstützung finden Sie auch in unserer Facebook-Gruppe



外页