

Genmitsu



Dust Shoe Assembly Guide

Note:

1. Make sure that the Top Cover of the dust shoe is secured tightly via screws from step1. Also make sure that all magnets are firmly holding the dust shoe together without any obstructions.
2. Make sure that the vacuum cleaner tube is inserted tightly before engraving so that it can have a better dust collection.
3. The length of the vacuum cleaner tube should long enough so that it will not affect the movement of spindle or makes the dust shoe loose from the spindle.


How to Replace the Dust Shoe Base (Bottom Cover)

Step1: Grasp the Central Chamber of the dust shoe and pull down the Bottom Cover.

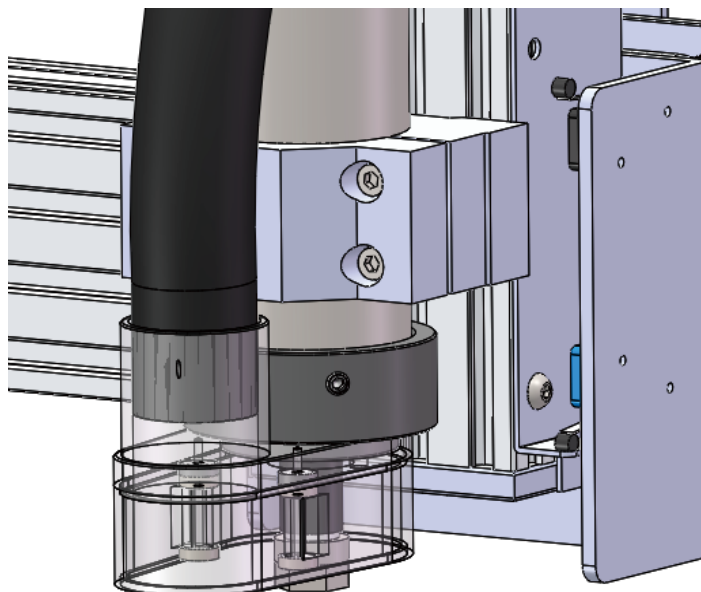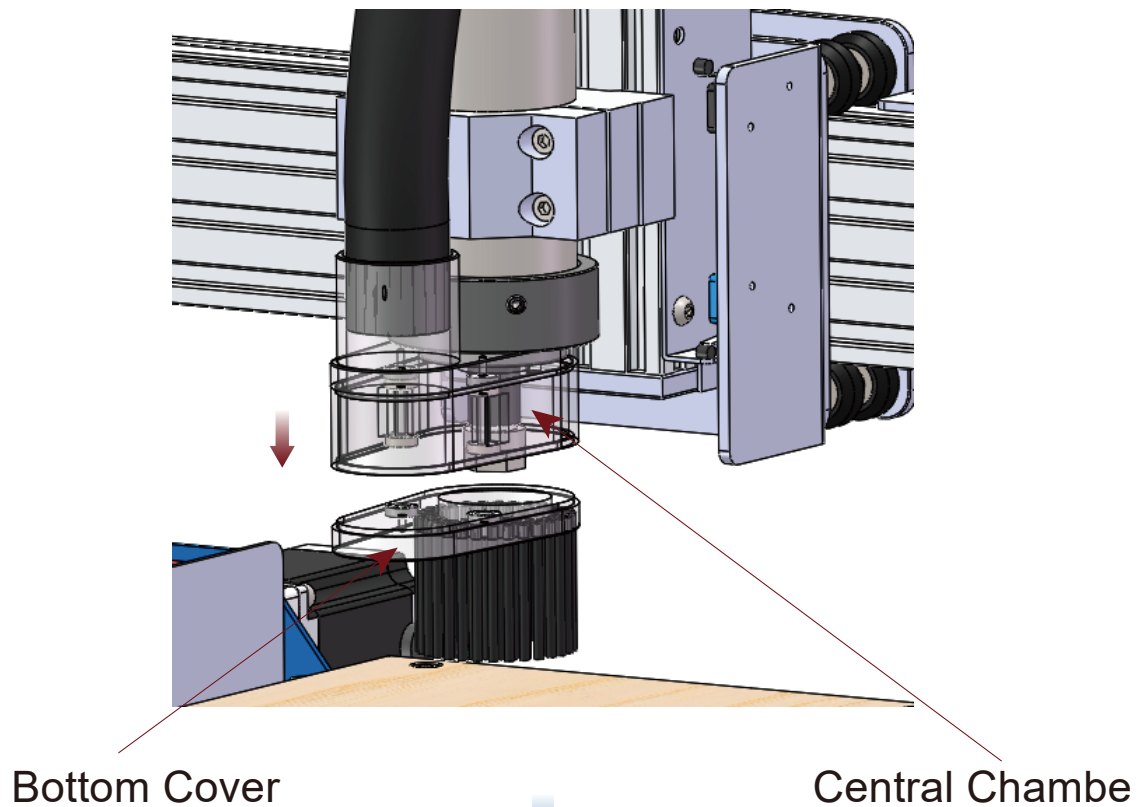



How to Replace the Dust Shoe Base (Bottom Cover)

Step2: Align the magnets on the Bottom Cover with the magnets on the Central Chamber. Then the Bottom Cover will be attached to the Central Chamber of the dust shoe.


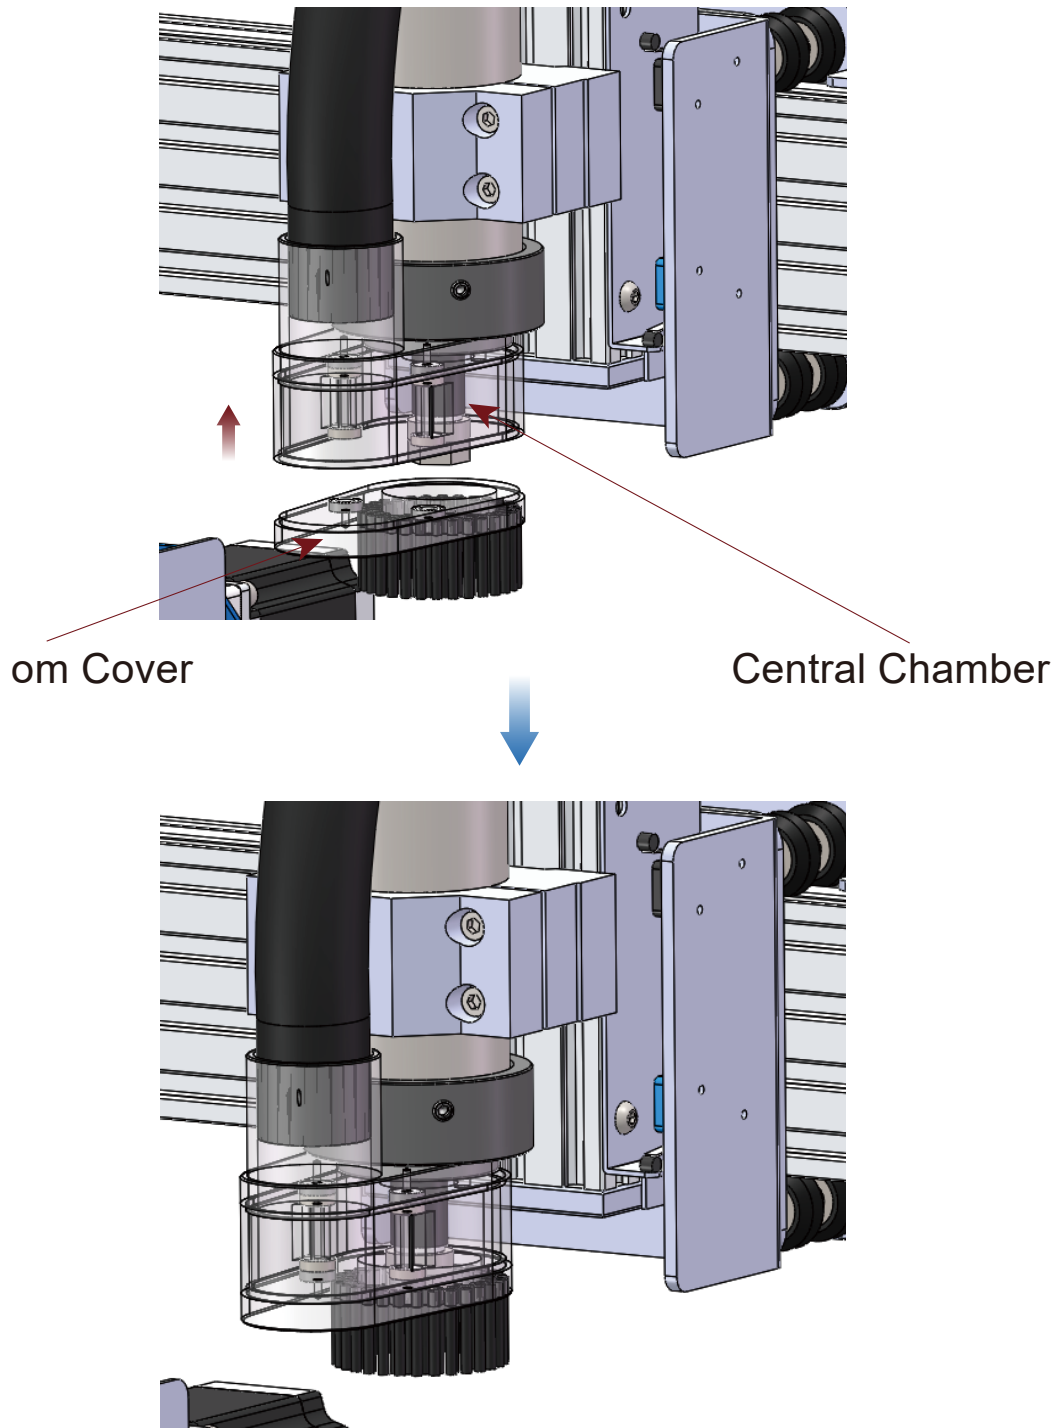


Step 1 Install the Top Cover

Install the Top Cover of the dust shoe on the spindle with 2 pieces of M6x6 screws.

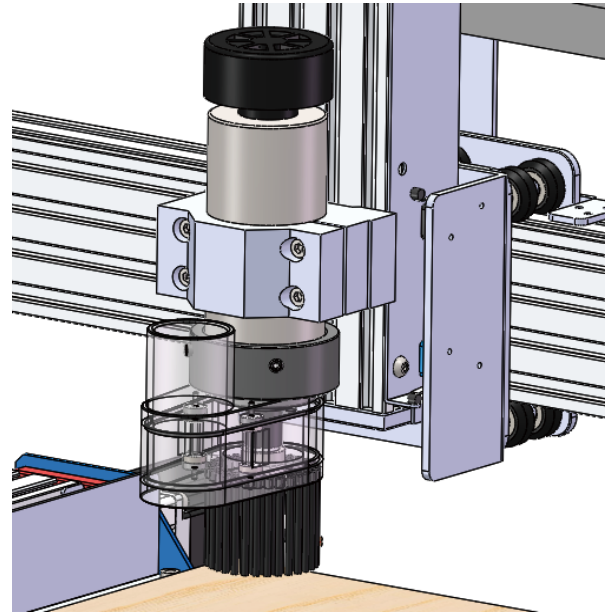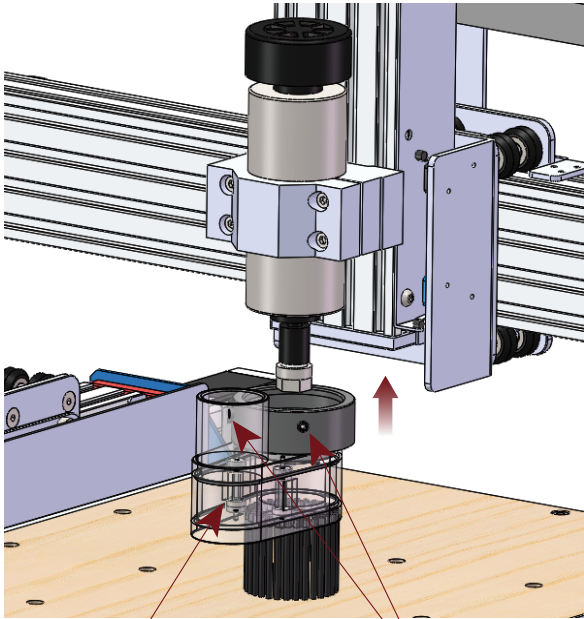



Dust Shoe M6x6 Screws

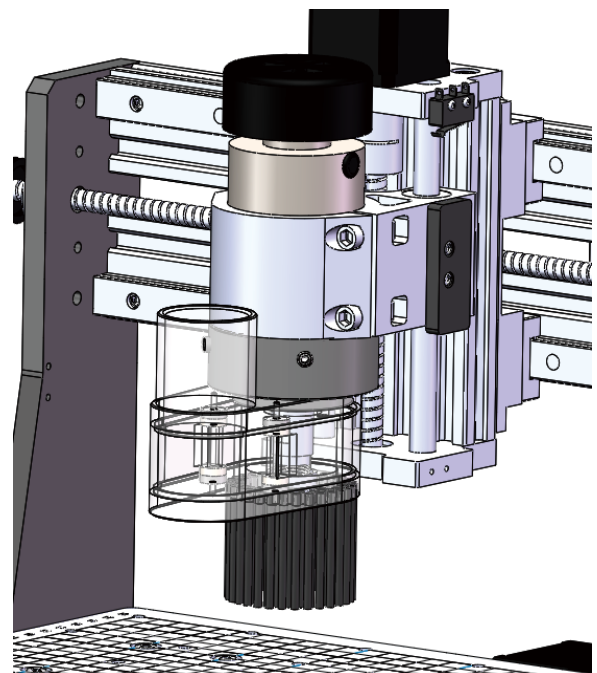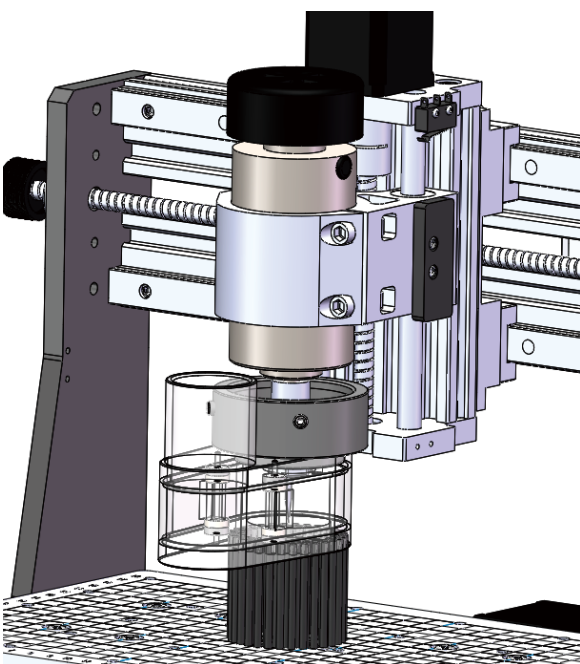



Step 2

Install the Vacuum Cleaner Tube

Insert the vacuum cleaner tube with 32mm outer diameter into the tube connection of the dust shoe upper cover.

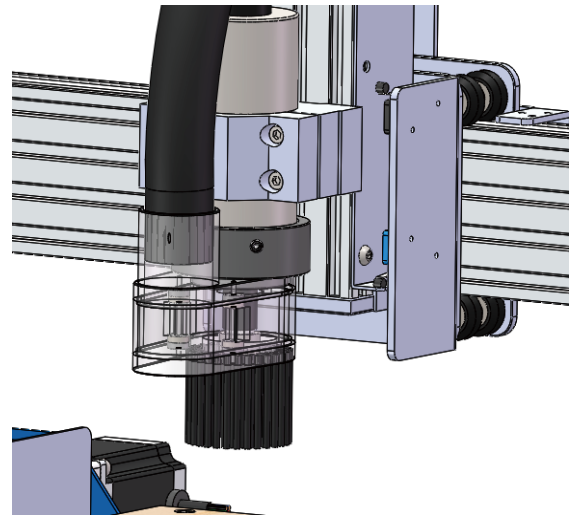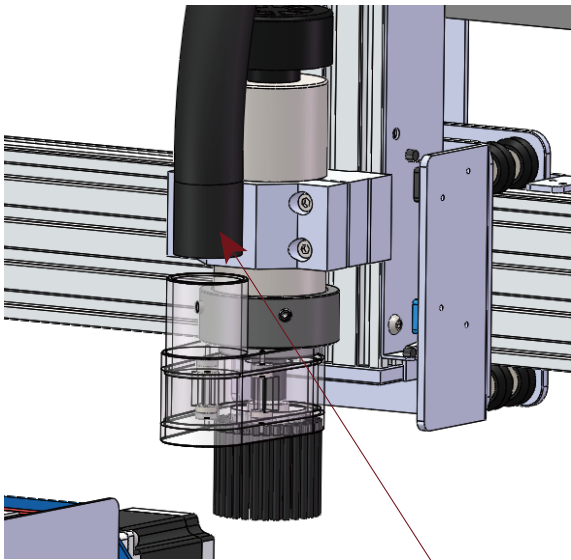

Vacuum
Cleaner Tube

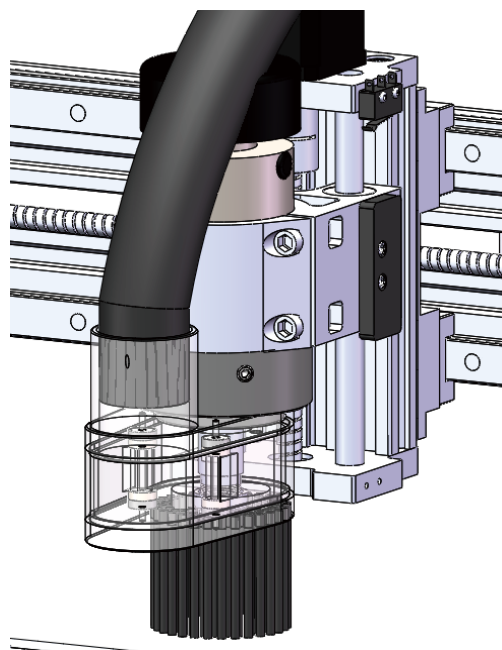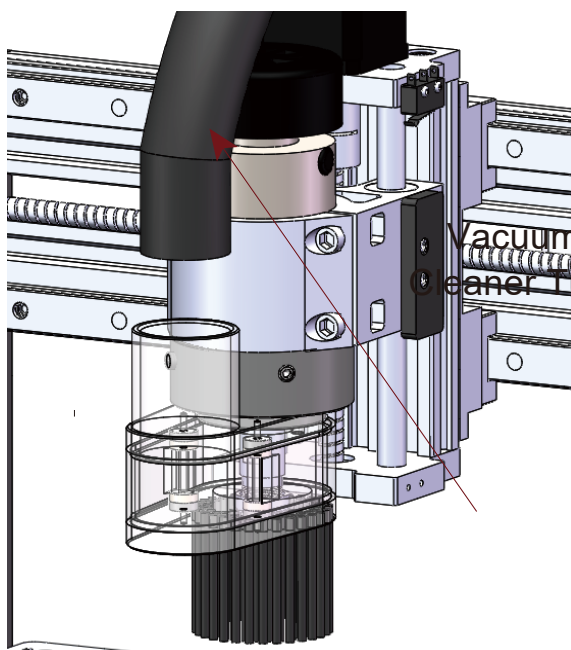

Step 3

Installation Completed

